



**12,000 MILES**

Lubricate and service as specified for 1,000, 2,000 and 6,000 miles, then lubricate as follows:

24. **Rear wheel bearing . . .** Remove plug; insert lubricant fitting . . . Lubricate and install plug . . . Short fibre wheel bearing grease—medium.
25. **Rear wheel bearing . . .** Remove plug; insert lubricant fitting . . . Lubricate and install plug . . . Short fibre wheel bearing grease—medium.

Fig. 17—Rear Axle

- 30—Axle drive shaft bearing oil seal retainer gasket
- 31—Axle drive shaft bearing shim
- 32—Axle drive shaft bearing oil hole plug